FeedaCONE

INSTRUCTION FOR FITTING.

Correct fitting allows easy removal without the use of tools.

Attention :- Fitting should only be performed by a competent person.

1. Firstly remove the spring or if it's a new feeder drill a hole 38mm to 76mm in the base of the drum.

2. Place the cone over the feeder hole and using the 3 pilot holes located near the narrow end of the slot drill 3x 3mm holes through the base of the hopper. Hold the cone in firmly in place while drilling.

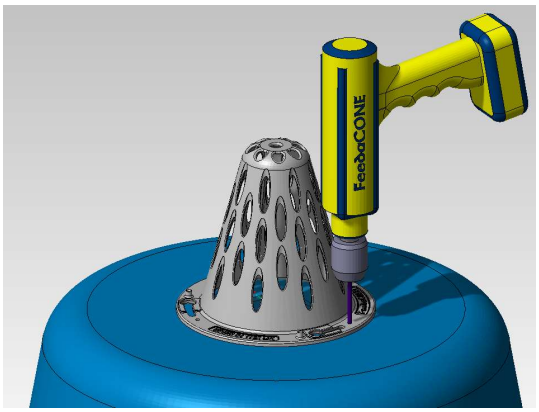

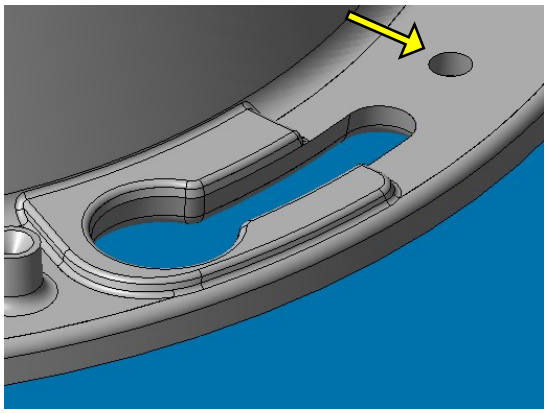

3. Fit the 3 self-tapping No.8 Pozi Pan Head Stainless Steel Screws provided.

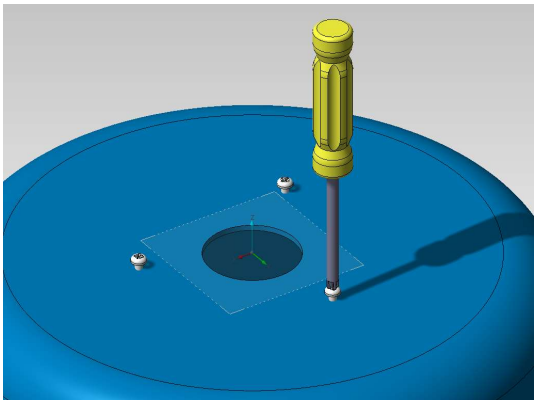

4. Place the Cone over the screw heads and rotate to align with the raised pad and gently tighten the screw onto the pad until light resistance is felt equally on all 3 pads.

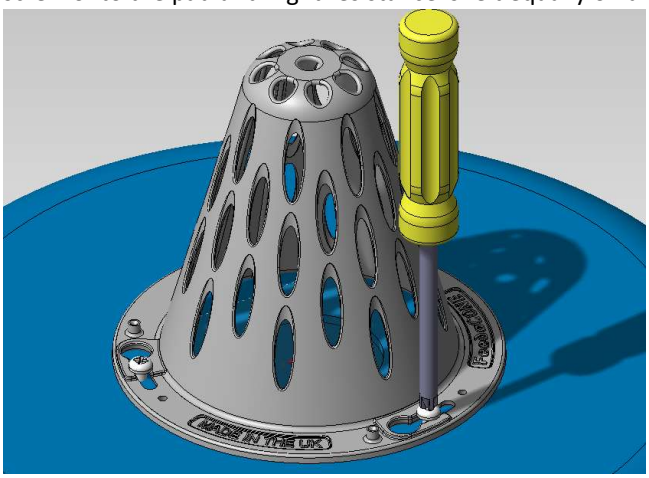

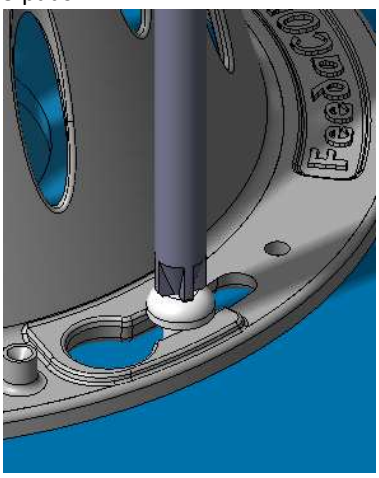

UK Registered Design Nº. 6079414 ®

5. Rotate the cone to the end of the slot. The cone should feel slightly loose. This is required if you want to remove the feeder by hand without using a screwdriver.

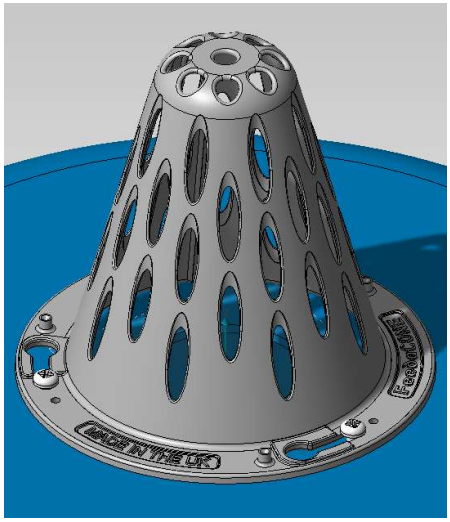

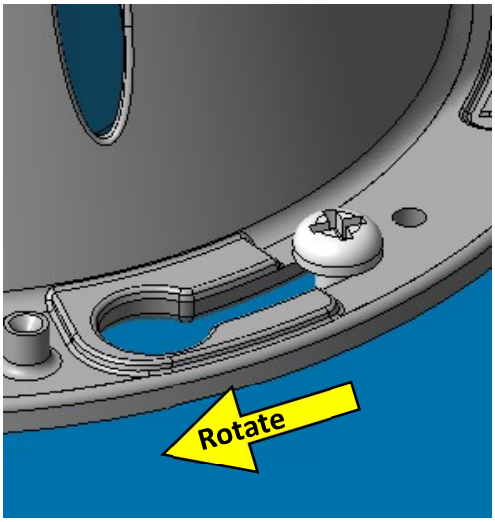

NOTES:

If the base of the Hopper has a seam straddle the seam and drill holes as shown here.

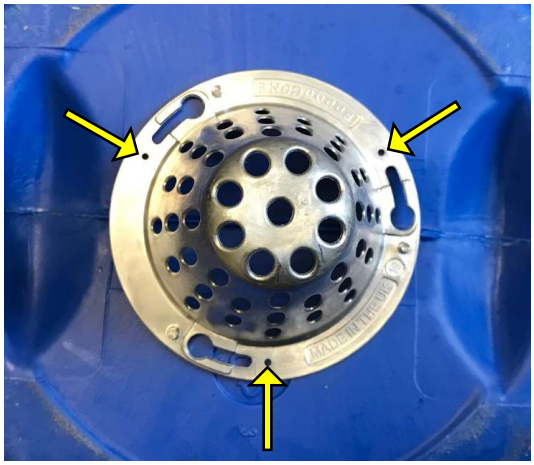
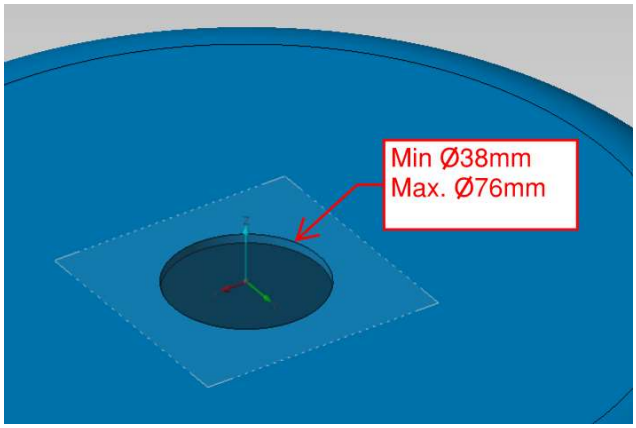
Minimum recommended hole diameter 38mm (1-1/2”) –
Max hole diameter 76mm (3”)